

1/8

FIG 1.


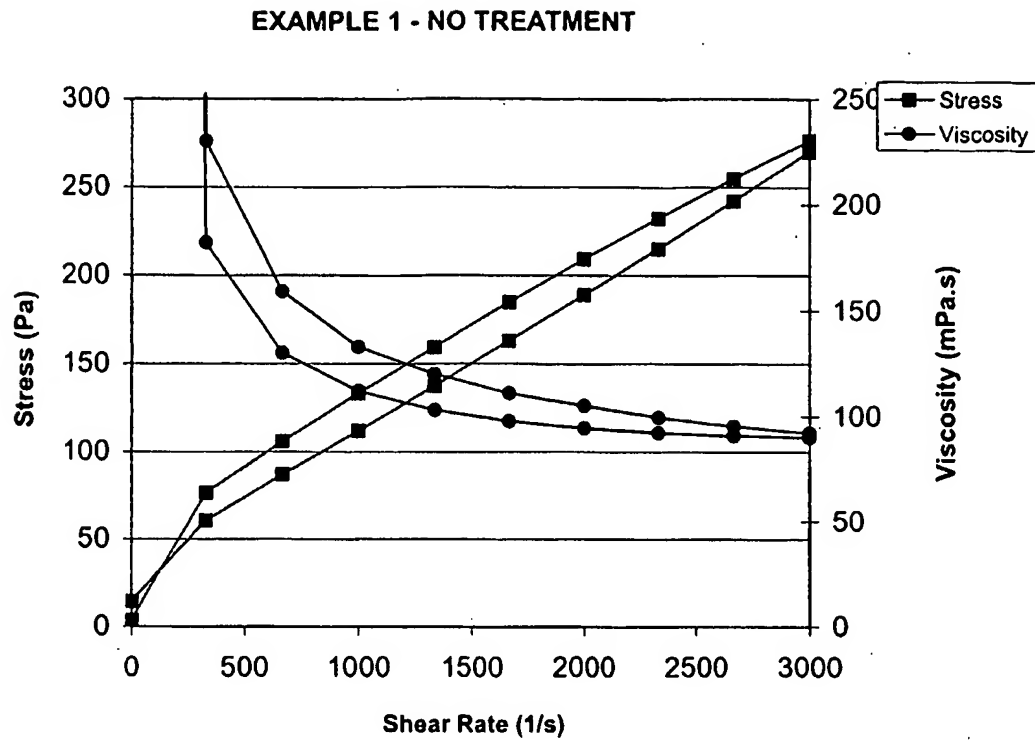


FIG. 2

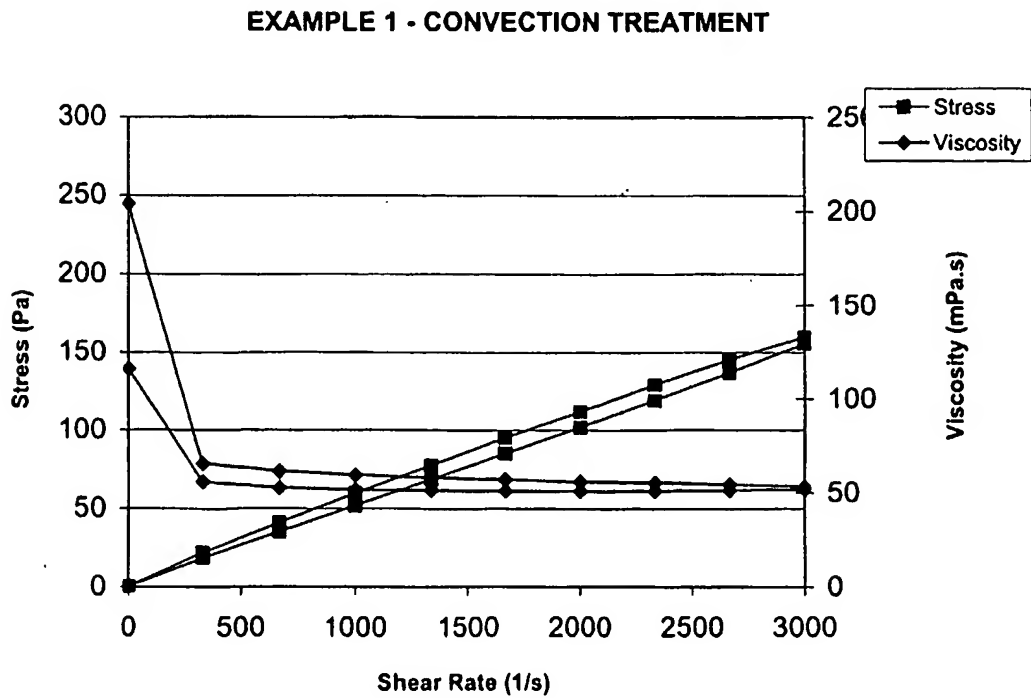

2/8

FIG. 3

## EXAMPLE 1 - MICROWAVE TREATMENT


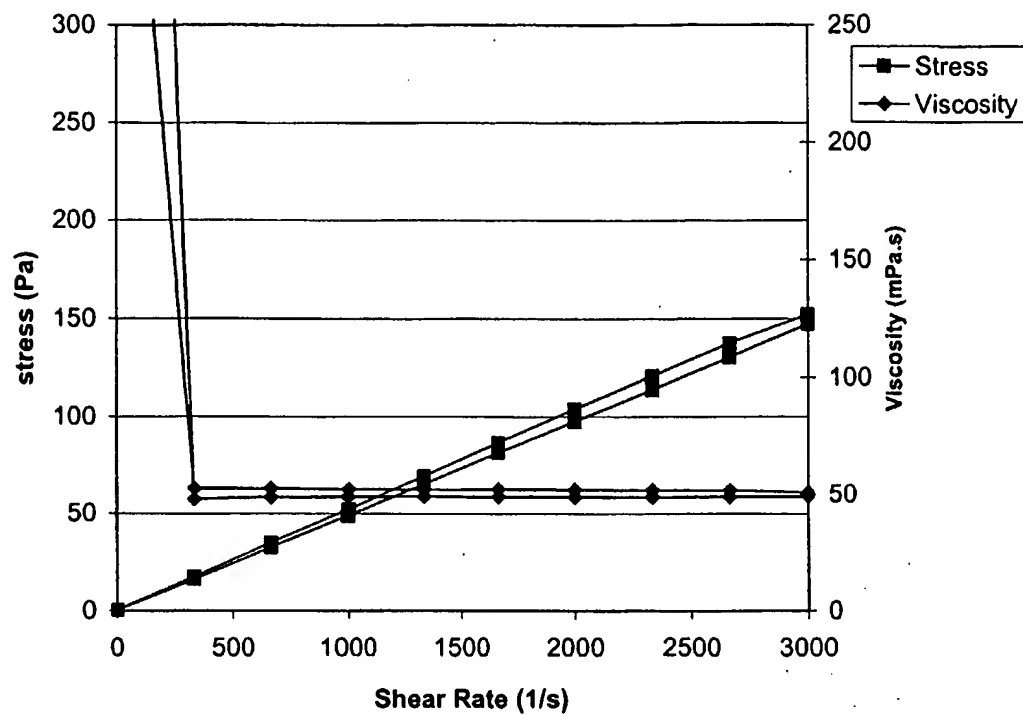


FIG. 4

## EXAMPLE 2 - NO TREATMENT

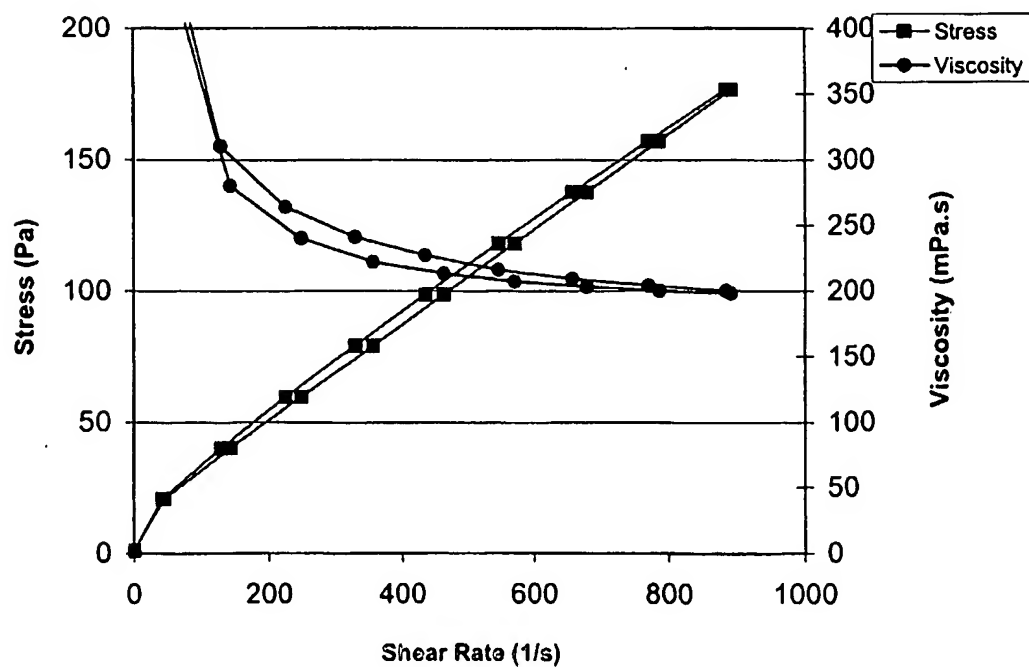

3/8

FIG. 5

## EXAMPLE 2 - CONVECTION TREATMENT

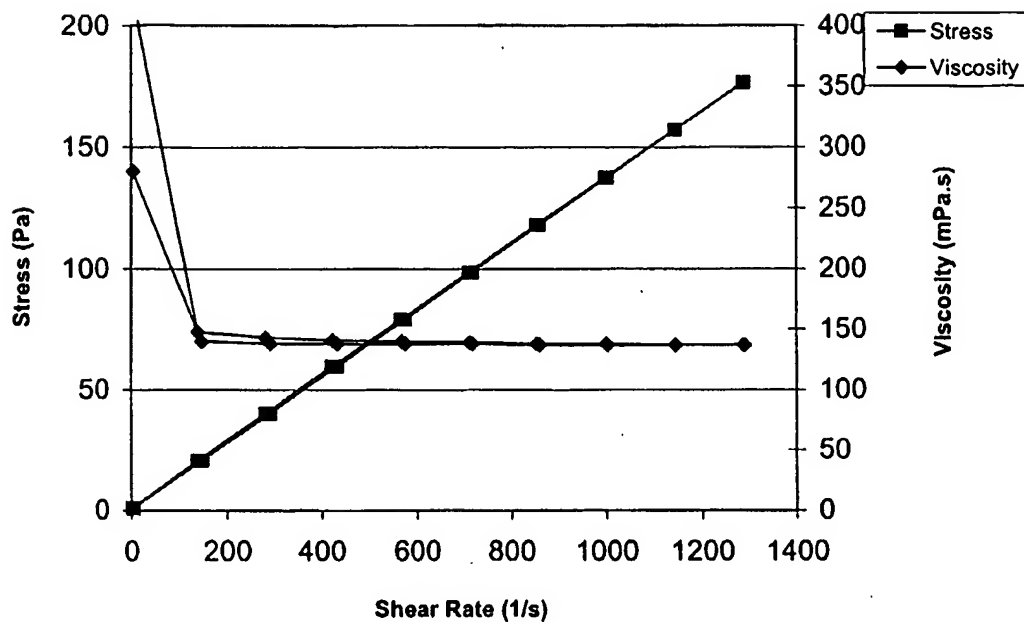


FIG. 6

## EXAMPLE 2 - MICROWAVE TREATMENT

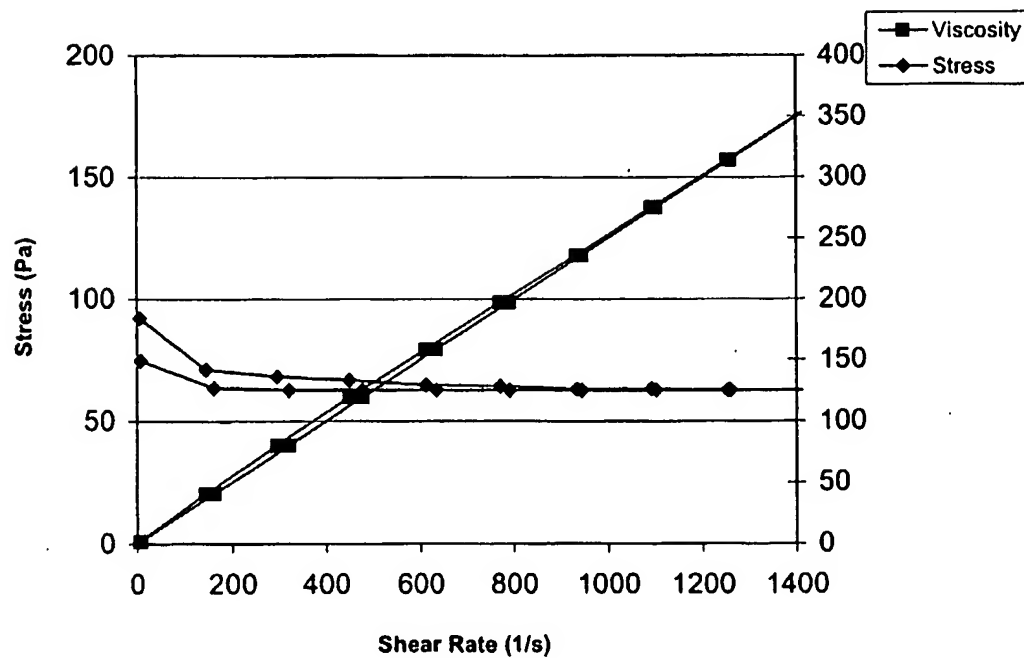


FIG. 7

4/8

## EXAMPLE 3 - NO TREATMENT

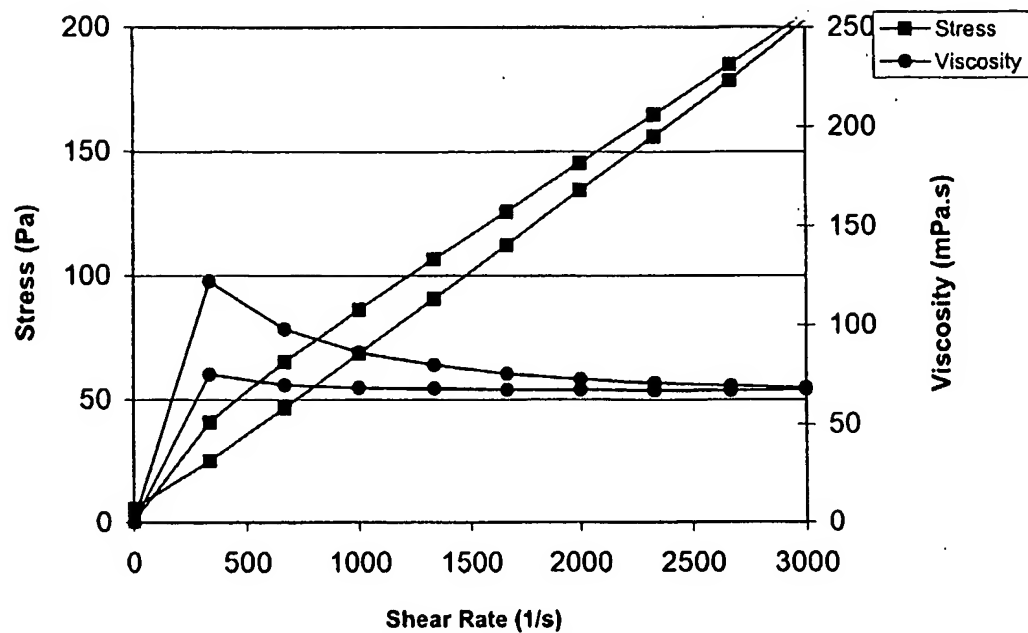


FIG. 8

## EXAMPLE 3 - CONVECTION TREATMENT

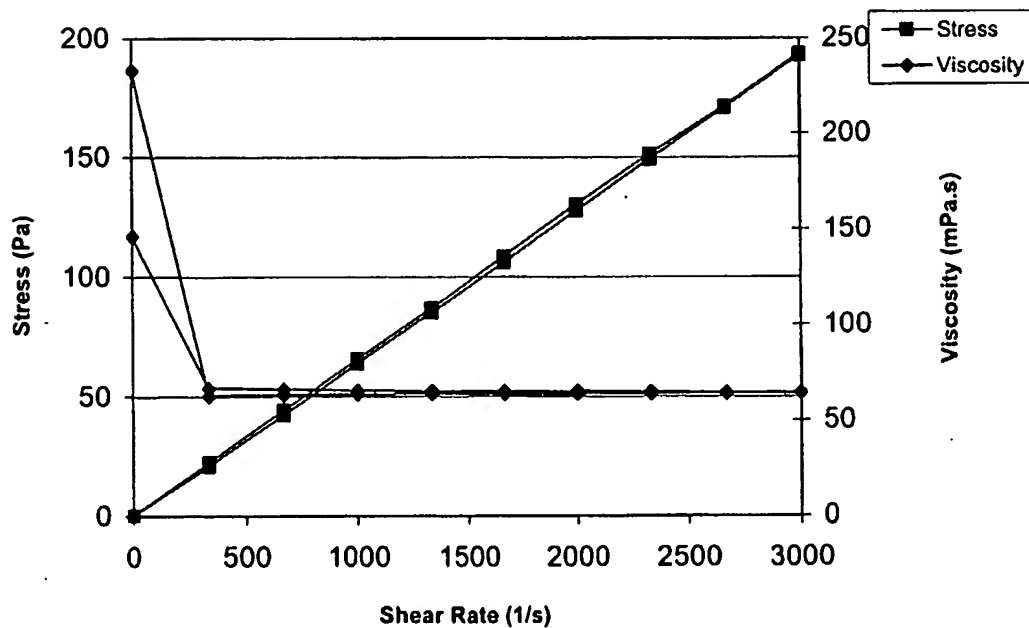


FIG. 9

5/8

## EXAMPLE 3 - MICROWAVE TREATMENT

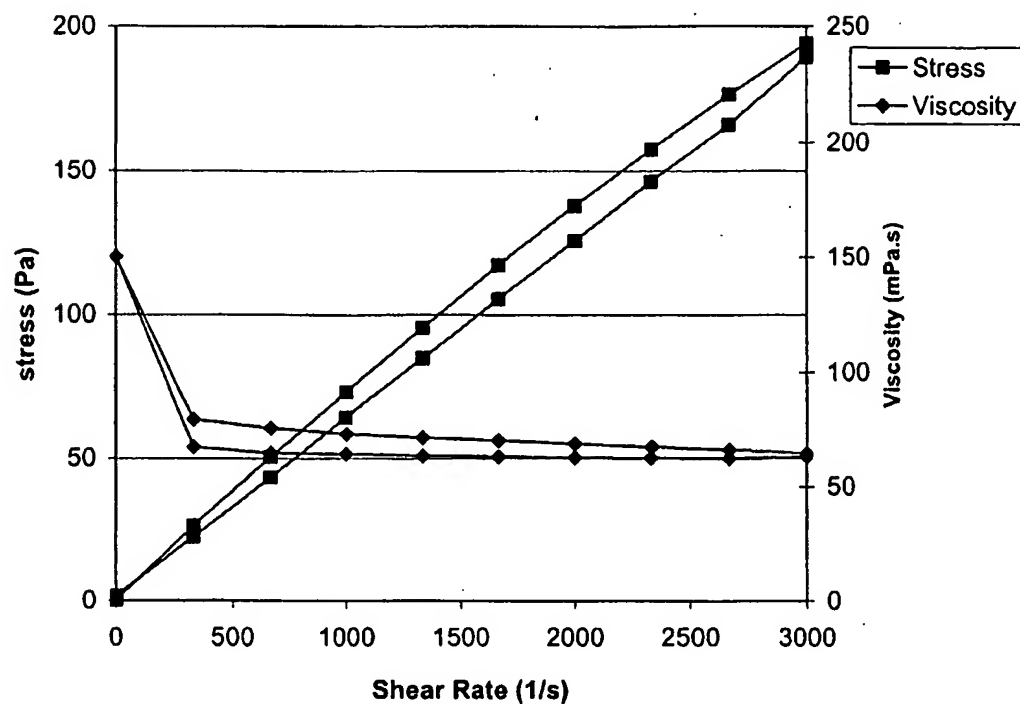


FIG. 10

## EXAMPLE 4 - NO TREATMENT

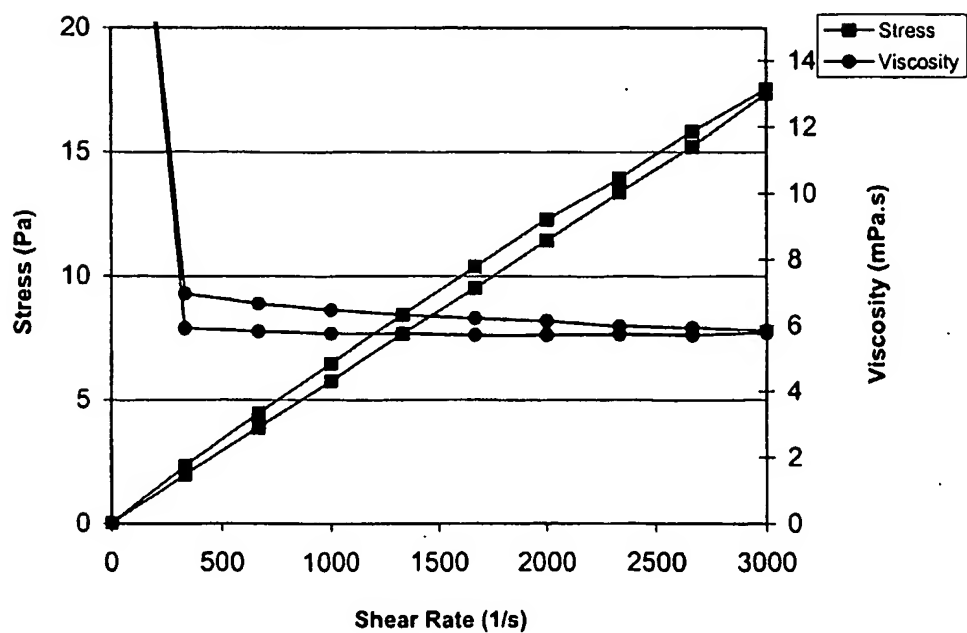


FIG. 11

EXAMPLE 4 - CONVECTION TREATMENT


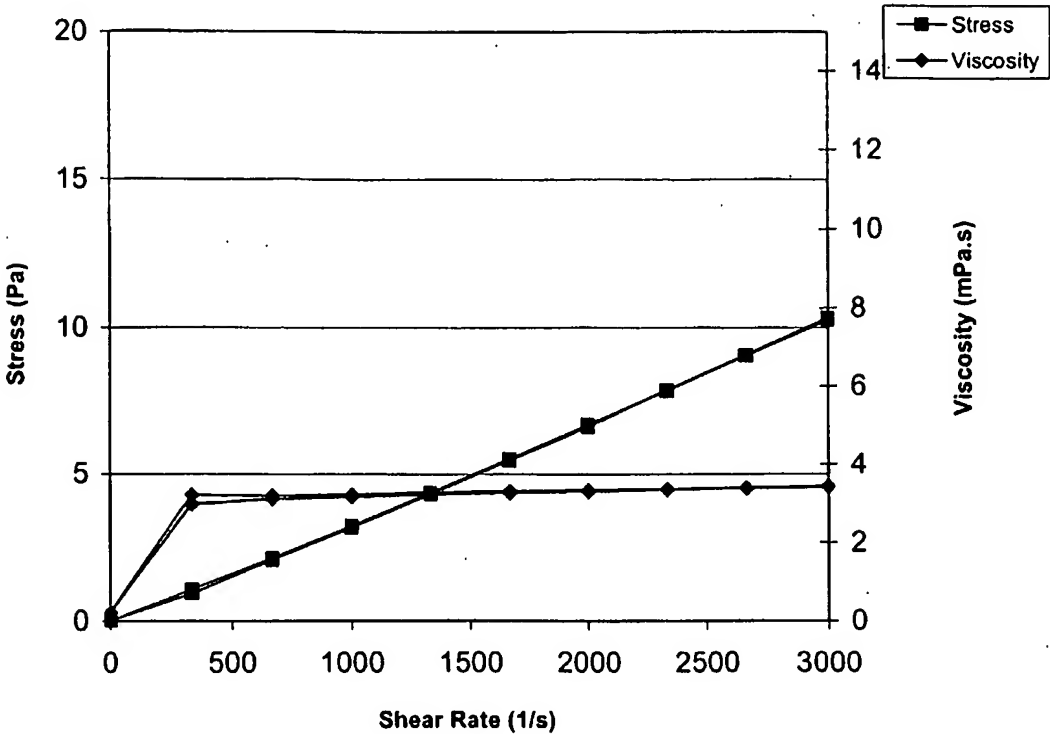


FIG.12

EXAMPLE 4 - MICROWAVE TREATMENT

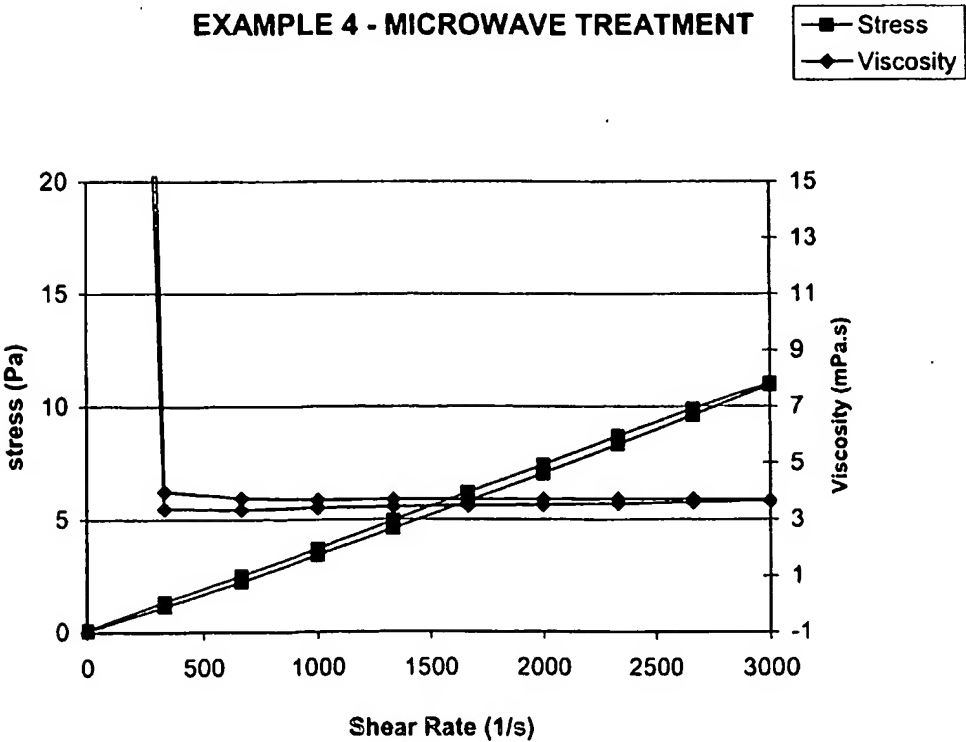

7/8

FIG. 13

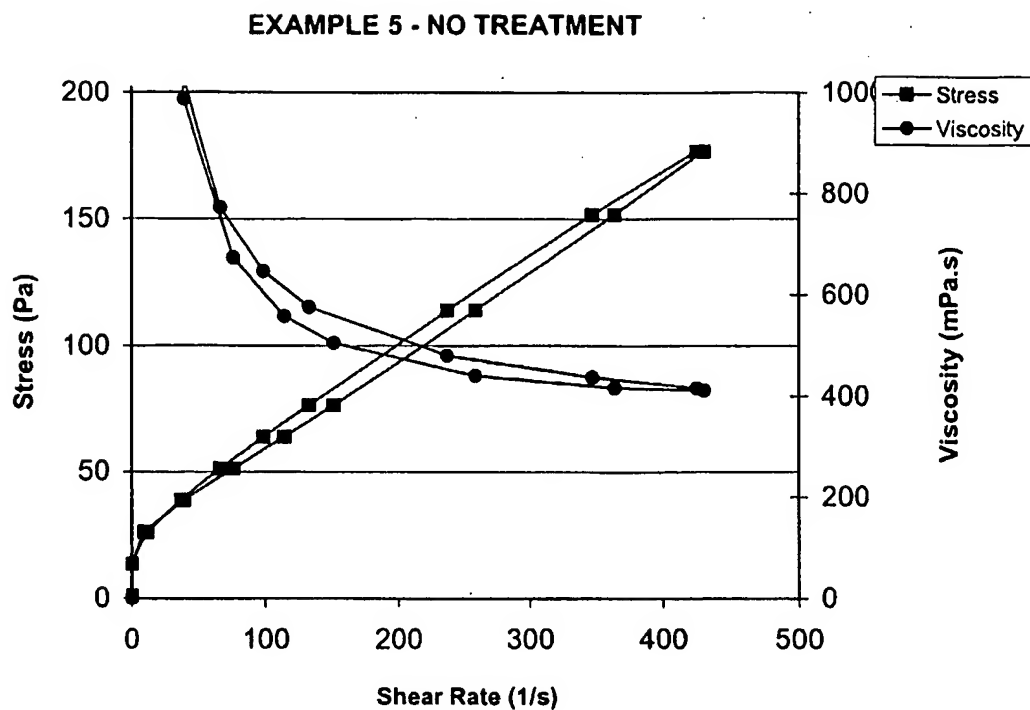


FIG. 14

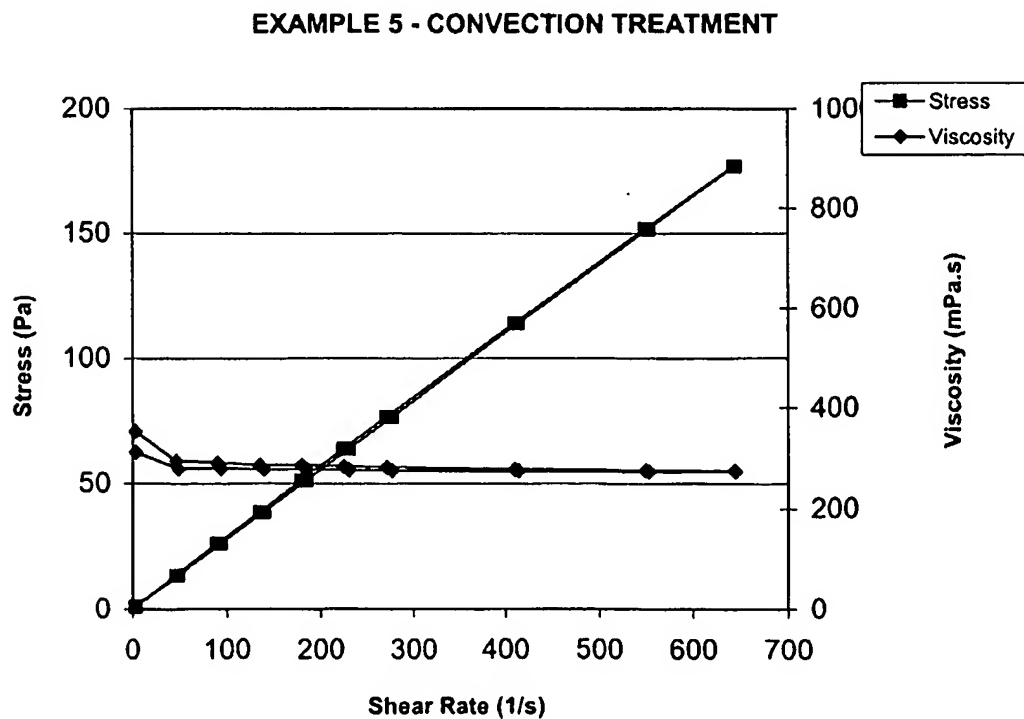


FIG. 15

## EXAMPLE 5 - MICROWAVE TREATMENT

